Roland PAD STAND PDS-2 Owner's Manual 取扱説明書

Thank you and congratulations on your choice of the PDS-2. The PDS-2 is a special practice stand for the RP-2, which allows you to play the pad either sitting or standing, since the height and angle is readily adjustable.

このたびは、ローランド・パッド・スタンド PDS-2 をお買い上げいただき、まことにありがとうございます。
PDS-2 は、立っても座っても演奏できるよう、高さ／角度の調整が可能な RP-2 専用のスタンドです。

Functions ／各部の機能

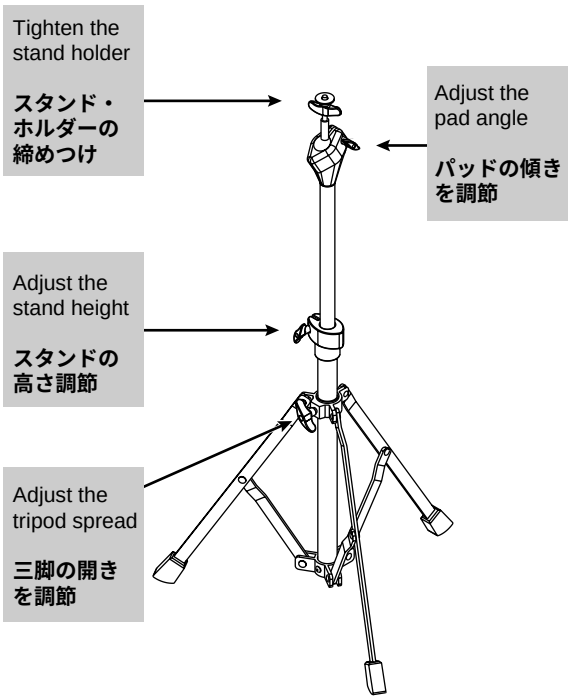

Setup ／セッティングのしかた

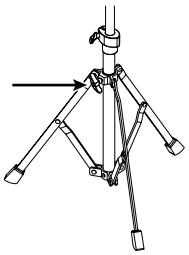

1. First open the tripod and set the spread of the tripod appropriately.

1. 適度に脚を開いて、三脚の開き具合を設定します。

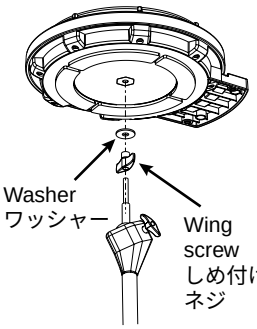

Pad attachment screw size : M8

パッド取り付けネジ寸法：M8

2. Attach the wing screw and washer in the order shown in the figure

NOTE When shipped from the factory, the order of the wing screw and washer was the reverse of that shown here. Be sure to attach them in the order shown in the illustration at left.

3. Attach the pad.
Turn the pad until the screw is just about all the way in; then stop, and tighten the wing screw from underneath the stand.

NOTE Do not forcefully try to turn the pad after the screw is already all the way in. Doing so may damage the stand's screw.

2. 締め付けネジとワッシャーの順番を、図のようにセットします。

ご注意! 工場出荷時、締め付けネジとワッシャーの順番は逆になっています。必ず、左図の順番で取り付けてください。

3. パッドを取り付けます。
パッドを回転させながら、ネジが軽く奥までしまったら、スタンド下から締め付けネジをしめてください。

ご注意! ネジが奥まで締まった状態で、さらに力を加えてパッドを回転させないでください。スタンドのネジ部が破損する場合があります。

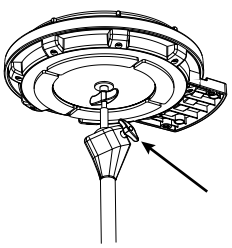

4. Adjust the angle of the pad.

4. パッドの傾きを調整します。

Copyright © 2002 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

© **2002 ローランド 本書の一部、もしくは全部を無断で複写・転載することを禁じます。**
製品の仕様および外観は、改良のため予告なく変更することがあります。

この機器を正しくお使いいただくために、ご使用前に以下の「安全上のご注意」と「使用上のご注意」をよくお読みください。また、この機器の優れた機能を十分ご理解いただくためにも、取扱説明書をよくお読みください。取扱説明書は必要なときにすぐに見ることができるよう、手元に置いてください。

安全上のご注意

火災・感電・傷害を防止するには

⚠警告と⚠注意の意味について

⚠ 警告	取扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表わしています。
⚠ 注意	取扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表わしています。 ※物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表わしています。

図記号の例

	△は、注意（危険、警告を含む）を表わしています。 具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表わしています。
	⃠は、禁止（してはいけないこと）を表わしています。 具体的な禁止内容は、⃠の中に描かれています。左図の場合は、「分解禁止」を表わしています。
	● は、強制（必ずすること）を表わしています。 具体的な強制内容は、● の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表わしています。

以下の指示を必ず守ってください

⚠警告

- この機器を使用する前に、以下の指示と取扱説明書をよく読んでください。
- この機器を分解したり、改造したりしないでください。
- 修理／部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランド・サービスに相談してください。
- 次のような場所での使用や保存はしないでください。
  - ○ 温度が極端に高い場所（直射日光の当たる場所、暖房機器の近く、発熱する機器の上など）
  - ○ 水気の近く（風呂場、洗面台、濡れた床など）や湿度の高い場所
  - ○ 雨に濡れる場所
  - ○ ホコリの多い場所
  - ○ 振動の多い場所

- この機器を、ぐらついた台の上や傾いた場所に設置しないでください。必ず安定した水平な場所に設置してください。
- お子様のいるご家庭で使用する場合、お子様の取り扱いやいたずらに注意してください。必ず大人のかたが、監視／指導してあげてください。
- お子様をスタンドのまわりで遊ばせないようにしてください。スタンドなどが倒れて、けがをする恐れがあります。
- この機器を落としたり、この機器に強い衝撃を与えないでください。

⚠注意

- この機器の上に乗ったり、機器の上に重いものを置かないでください。
- ネジを外した場合は、小さなお子様が誤って飲み込んだりすることのないようお子様の手の届かないところへ保管してください。
- スタンドを使用するときには、しめ付けネジやネジを確実に締めてください。特に演奏前には確実に取り付けられているかどうか確認してください。確実に取り付けられていないとパッドや機器が落下してけがをする恐れがあります。
- スタンドの三脚をセッティングおよび収納する際は、スタンドを持っている指をはさまないよう注意してください。

使用上のご注意

このページに記載されている「安全上のご注意」以外に、次のことに注意してください。

お手入れについて

- 通常のお手入れは、柔らかい布で乾拭きするか、堅く絞った布で汚れを拭き取ってください。汚れが激しいときは、中性洗剤を含んだ布で汚れを拭き取ってから、柔らかい布で乾拭きしてください。

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES". These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠WARNING and ⚠CAUTION Notices

⚠WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

⚠	The △ symbol alerts the user to important instructions or warnings.The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⃠ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ● symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual.
- Do not open or perform any internal modifications on the unit.
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.
- Never use or store the unit in places that are:
  - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
  - Damp (e.g., baths, washrooms, on wet floors); or are
  - Humid; or are
  - Exposed to rain; or are
  - Dusty; or are
  - Subject to high levels of vibration.
- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit.
- To prevent accidents, never allow small children to play near the stand.
- Protect the unit from strong impact.
  (Do not drop it!)

⚠ CAUTION

- Never climb on top of, nor place heavy objects on the unit.
- Should you remove screws, make sure to put them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally.
- Make sure to firmly tighten all wing screws and bolts after you have assembled the stand and attached a pad or unit to it. You should probably also try to make a habit of checking and retightening them if necessary before every performance. You risk injury if you have loose screws or clamps, since a pad or unit can fall unexpectedly.
- When setting up or storing the tripod stand, be careful not to pinch the fingers you use to handle the stand.

IMPORTANT NOTES

In addition to the items listed under "USING THE UNIT SAFELY" on this page, please read and observe the following:

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.

サービスの窓口

商品と修理に関するお問い合わせは・・・

最寄りの営業所までご相談ください。
受付時間：10:00～17:00（土日祝日、および弊社規定の休日を除く）
かけ間違いの無いよう、番号をお確かめのうえお問い合わせください。

札幌営業所
〒060-0042　札幌市中央区大通西6-2-6
三井生命札幌大通ビル1F　TEL (011) 281-0708

仙台営業所
〒980-0014　仙台市青葉区本町2-10-33
第2日本オフィスビル1F　TEL (022) 225-6221

東京営業所
〒101-0041　東京都千代田区神田須田町2-7
タームスビル7F　TEL 代表(03) 3251-5595

名古屋営業所
〒460-0008　名古屋市中区栄2-11-7
伏見大島ビル2F　TEL (052) 202-1881

大阪営業所
〒530-0004　大阪市北区堂島浜1-4-16
大和堂島ビル7F　TEL代表 (06) 6345-9521

広島営業所
〒730-0032　広島市中区立町2番27
大和広島ビル9F　TEL (082) 247-2731

福岡営業所
〒812-0011　福岡市博多区博多駅前3-27-22
ソロン博多駅前ビル2F　TEL (092) 436-8971

修理に関するお問い合わせは・・・

商品をお求めの販売店か上記営業所、または下記のサービス・ステーションまでご相談ください。
受付時間：10:00～17:00（土日祝日、および弊社規定の休日を除く）
かけ間違いの無いよう、番号をお確かめのうえお問い合わせください。

東京サービス・ステーション
〒101-0041　東京都千代田区神田須田町2-7
タームスビル8F　TEL (03) 3251-1391

浜松サービス・ステーション
〒433-8118　浜松市高丘西4-7-19
TEL (053) 437-3212

大阪サービス・ステーション
〒530-0001　大阪市北区梅田1-2-2-200
大阪駅前第二ビル2F
TEL (06) 6345-9537

商品のお取り扱いに関するお問い合わせは・・・

お客様相談センターまでご相談ください。
尚、お問い合わせの際には取扱説明書を
ご用意ください。

お客様相談センター　受付時間：午前10時～午後5時（土、日曜、祝日および弊社規定の休日を除く）

＜電話番号＞

■大阪　TEL (06) 6345-9500　　**■東京　TEL (03) 3251-6150**

＜住所＞

〒530-0004　大阪市北区堂島浜1-4-16　大和堂島ビル7F

※上記窓口の名称、所在地、電話番号等は、予告なく変更することがありますのでご了承ください。　'01. 3. 19 現在

ローランド株式会社　02897723　1*RMT